
How to program the PLT






With the remote control :

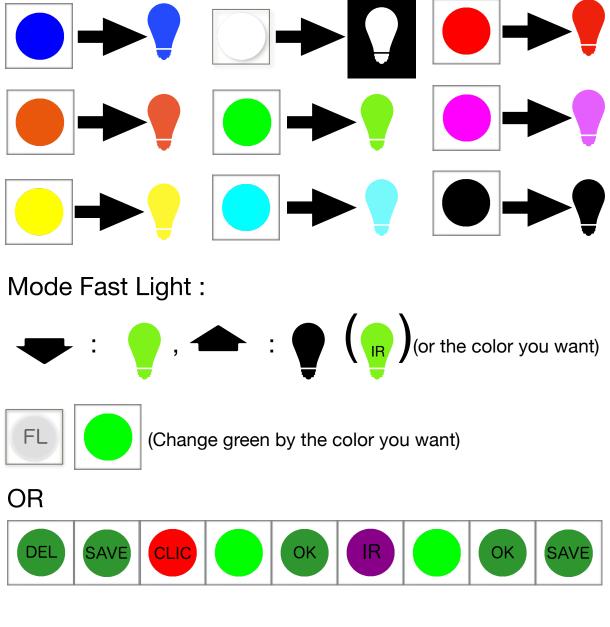

Mode Timer :




How to program the PLT

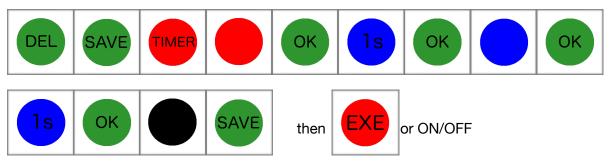

Then OK with the remote control to start it.

Mode Clic :

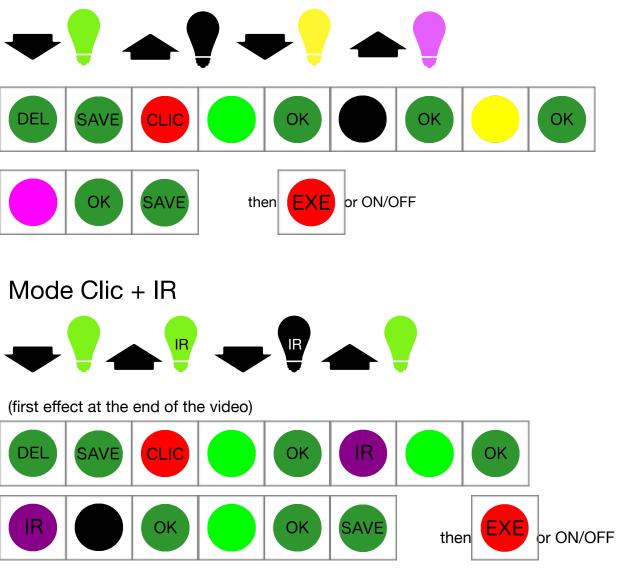

To send "OK" order (but you can insert it into another Clic sequence) :

